HANDYHEAT®
DANSK VARMEKABEL A/S

ParkétVarme:

ParkétVarme is a carbon heating film suited for installation beneath wood and laminate floors. Its advantages are:

- Fast and simple to install
- Minimal effect on floor height, only 6 mm incl. insulation plates
- Even heat coverage - very careful heating of the wood floor
- Dry installation, ready for use just after installation
- Maintenance free
- 10 year warranty



Please contact us for further information
or visit our website:

Dansk Varmekabel A/S
Lundagervej 102
DK-8722 Hedensted
Danmark
Tel: +45 7675 8030
Fax: +45 7675 8032
www.handyheat.net
info@handyheat.net

Manufactured by:
HANDYHEAT, DK-8722 Hedensted, Denmark

DVK-00303-001

HANDYHEAT®
DANSK VARMEKABEL A/S

ParkétVarme
Carbon Heating Film



HANDYHEAT®
DANSK VARMEKABEL A/S

Floor Heating System designed for wood and laminate floors.


Wood and laminate floor have become very popular, but in winter time they can be cold and very uncomfortable. With ParkétVarme you are getting warm floors any time and best comfort.
ParkétVarme is a carbon heating film, only 0,3 mm thick, composed of a uniformed carbon coating over a polyester film.


ParkétVarme can be installed directly under wood or laminate floor. Due to the direct contact with the flooring the heating system is very fast acting.

Item number	Type
570752496250	PV500-2 meter 1m², 80 Watt
570752496251	PV500-4 meter 2m², 160 Watt
570752496252	PV500-6 meter 3m², 240 Watt
570752496253	PV500-8 meter 4m², 320 Watt
570752496254	PV500-10 meter 5m², 400 Watt
570752496300	PV1000-2 meter 2m², 160 Watt
570752496301	PV1000-4 meter 4m², 320 Watt
570752496302	PV1000-6 meter 6m², 480 Watt
570752496303	PV1000-8 meter 8m², 640 Watt
570752496304	PV1000-10 meter 10m², 800 Watt
570752496310	PV-Kit
570752496311	PV-underlay, 5 m²



Installation under a "floating" wood floor.

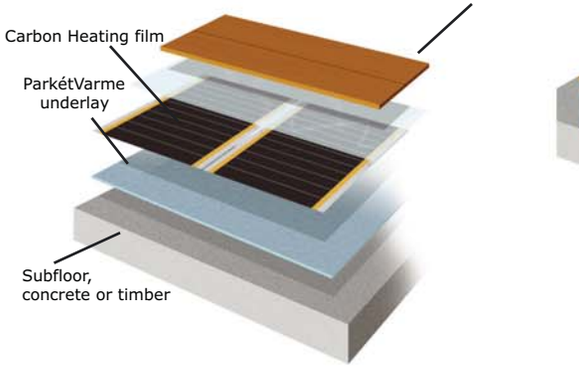

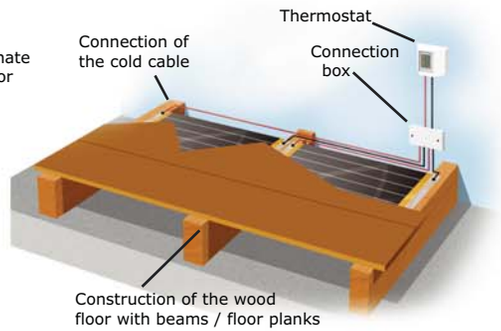

Installation of ParkétVarme Carbon Heating Film

Standard widths of ParkétVarme are 500 mm (PV500) and 1000 mm (PV1000), both with output 80 watt pr m2. These two widths make the installation of heating film fast and simple.

Easy way to warm floor:


Lay out ParkétVarme underlays on the existing concrete or wood sub-floor. If there is no insulation in the floor, two layers of underlays are recommended.



Width 500 or 1000 mm



Roll out Parkétvarme carbon heating film on the underlays. Cut a groove along the wall and lay the 'cold' cables so that the surface remains plain.

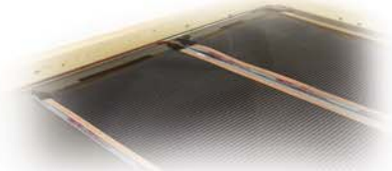

The 'cold' cables are joined to the junction box. The thermostat is installed and connected to the junction box and supply voltage.

In the end new wood or laminate floors are laid.



